

SynchroTeq® Plus

Circuit Breaker Controlled Switching

Smart Coding & Options Selection

24/11/2021



Vizimax Inc

2284, de la Province - Longueuil

Québec, Canada, J4G 1G1

T: +1 (450) 679-0003 - F: +1 (450) 679-9051

www.vizimax.com

Vizimax Reference Number

Enter option code to complete the part number

Choose among the following options

STP030000

1 - SynchroTeq Plus Unit Configuration (Ref : STP030000)

a - Hardware version & Mounting

The "Standalone" version comes with a protection cover

19" Rack (to be installed in protection&control building)	RM			
Stand alone (to be installed in circuit breaker cabinet)	SA			

b - Language

The selected language applies to the face plate, front display, web interface and documentation

French	FR			
English	EN			
Chinese	ZH			

c - Voltage

The selected voltage applies to the main power supply, control inputs, coil outputs, 52a/52b inputs

48 Vdc			1	
110 Vdc			2	
125 Vdc			3	
220 Vdc			4	

d - Current Input (CT Connections) - see Note 1

1 Amp RMS nominal current				1
5 Amps RMS nominal current				5

Note 1: Universal PT input (37,5 - 150Vac), line-to-ground connection recommended

Smart coding examples

SynchroTeq Plus Unit, rackmount, English version, 125Vdc, 1A CT

STP030000 RM EN 3 1

2 - SynchroTeq Plus Communication and Synchronization Options

All the options below are not included in the price of SynchroTeq Plus unit (STP030000). Additional costs may apply, please contact your Sales Rep for more information

2.1 SynchroTeq Plus Options - additional Communication ports and synchronization module - see Note 2

Standard: Two Ethernet 100BASE-T / RJ45 port + one RS485 + One USB port

Description	Reference	Quantity
One (1) Ethernet 100BASE-LX10 port / Single Mode F.O	RWC0P0000	
One (1) Ethernet 100BASE-FX port / Multi Mode F.O	RWC0D0000	
One (1) Ethernet 100BASE-T port / RJ45	RWC0C0000	
One (1) IRIG-B module (synchronization module in connector U)	RWC0Y0000	

Note 2 : The Ethernet communication port on rear panel can be used for remote data analysis, maintenance and time synchronization. Up to Two additional ports may be ordered.

2.2 - SynchroTeq Communication module - Additional communication ports and protocols

Description	Reference	Select your option
SynchroTeq Communication module with Two (2) isolated Ethernet 100BASE-T port + one (1) 100BASE-FX Ethernet Fiber Optic Multimode port + two (2) isolated Serial RS485/RS232 ports + one (1) Digital Output and supported protocols : DNP3.0 Slave, Modbus Slave, IEC 61850 Server - Integrated XCBR LN.	RWK000016	

2.3 - SynchroTeq Unified Communication Services software

Description	Reference	Select your option
SynchroTeq Unified Communication Services: For automatic data transfer to a centralized site of events and waveforms. Base for ten (10) SynchroTeq units, expandable by pack of 10 or 25 licenses.	RWS055000	

3 SynchroTeq Plus Options - Function boards

All the options below are not included in the price of SynchroTeq Plus unit (STP030000). Additional costs may apply, please contact your Sales Rep for more information

3.2 Bypass Module (STP030302) Control option

Description : SHL-1 - DCO type - Bypass module	Reference
Bypass module configured in 'automatic mode' (default manufacturing configuration) - See Note 3	STP030302 (std)
Bypass module configured in 'Timed mode' - See Note 3	STP030302 (temp)
Bypass module configured in 'Memorized automatic mode' - See Note 3	STP030302 (mem)

Select your option

Note 3 : SHL modules are "Standalone Hardwired Logic" units and are independent from the main unit software. By default, the bypass module is set to "Automatic Mode", if you wish to use another mode, please select one of the available configuration. Please refer to the Bypass manual

3.2 C/B coil control outputs (SBO - Select Before Operate) module option

Standard: standard SPSBO module with 'source' configuration shared by all 6 outputs.

Description :	Reference
SPSBO-F module 'Select Before Operate' with 6 floating coil control outputs - Note 4 (The STP030304 option is free of charge and replaces the standard SPSBO board in the AA-BB slot).	STP030304
Dual Batteries SPSBO module - Note 5 (The STP030305 option is free of charge and replaces the standard SPSBO board in the AA-BB slot).	STP030305

Select your option

Note 4 : This option provides 6 potential free isolated solid state outputs. These outputs are designed to 'source' or 'sink' the current from the C/B coils connected to the positive bus, or to drive a C/B electronic controller. Please refer to the STP030304-UG manual for more details.

Note 5 : This option allows to separate CLOSE and OPEN coil power supply circuits. The C/B (3)CLOSE and (3)OPEN outputs are controlled in 'source' configuration. Please refer to the STP030305-UG manual for more details.

3.3 Additional three phase voltage measurement module with residual Flux calculation (STP03010x) option

Standard: no additional voltage measurement module

Description	Reference
SPFLUX module for PT sensors: including three (3) additional PT inputs + three (3) 4-20 mA sensor inputs + residual flux calculation algorithm.	STP030103
SPFLUX module for HV bushing sensors: including three (3) additional Power Transformer High Voltage Bushing Sensors inputs+ three (3) 4-20 mA sensor inputs + residual flux calculation algorithm - (This option requires an active junction box: See Note 6).	STP030101


Select your option

Note 6 : if you select this option, you have to select items in section 4 - SynchroTeq Plus - Bushing Sensors, active junction box and connections.

4 SynchroTeq Plus - Bushing Sensors, active junction box and connections

This section must be filled **ONLY** if you selected the **STP030101** option.

All the options below are not included in the price of SynchroTeq Plus unit (STP030000). Additional costs may apply, please contact your Sales Rep for more information

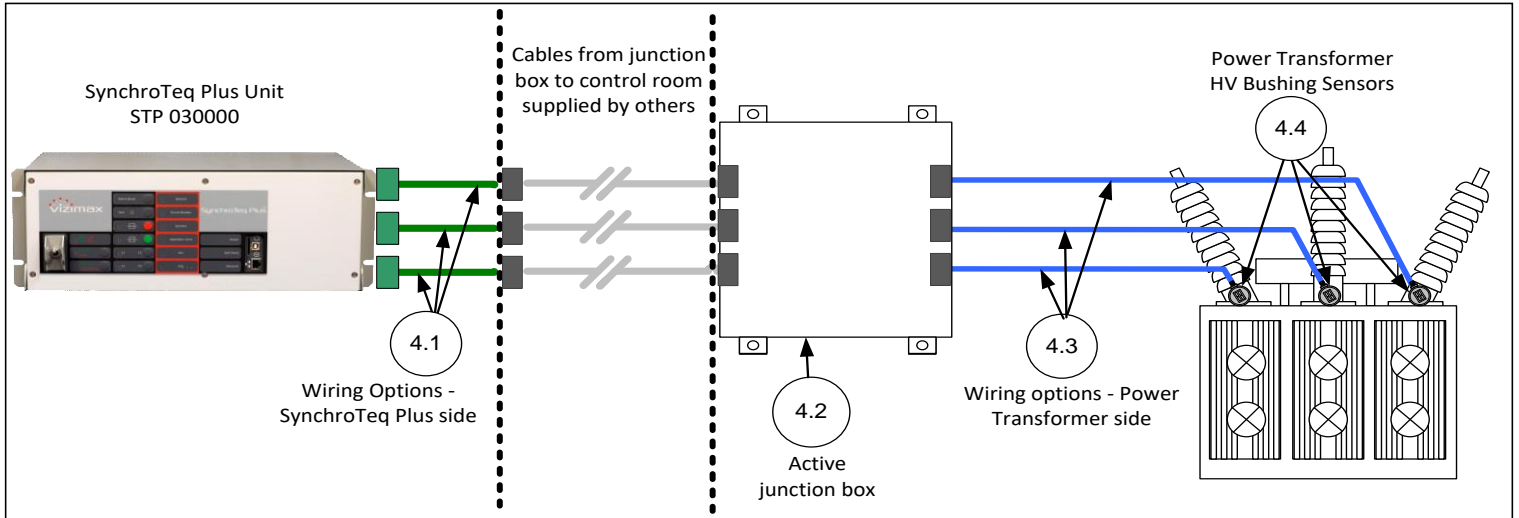

4.1 - Wiring Options - SynchroTeq Plus side

All cables are equipped and terminated for an immediate connexion to the main unit - Other side: free wires

Description	Reference
Three (3) cables - SynchroTeq Plus to terminal block - 3m/10 feet each	STP030170
Three (3) cables - SynchroTeq Plus to terminal block - 5m/15 feet each	STP030180

Select your option

4.2 - Junction box

Active Junction Box includes free wires connectors on SynchroTeq Plus side and Power Transformer side

Description	Reference
Active Junction Box with 3 connections	STP030200
Active Junction Box with 1 connection	STP030201

Select your option

4.3 - Wiring Options - Power Transformer side - Note 7

Sensor cable, with pre-assembled connector on sensor side, free wires on the junction box side

Description	Reference
One (1) cable - junction Box to bushing sensor - 15m/50feet	STP030315
One (1) cable - junction Box to bushing sensor - 30m/100 feet	STP030330
One (1) cable - junction Box to bushing sensor - 50m/164 feet	STP030350

Quantity

Note 7 - One (1) cable per phase has to be ordered. For other cable length - Please inquire

4.4 - Power Transformer HV Bushing sensors - Technical Data - Mechanical fitting - Note 8

Set of three (3) sensors - one per phase - to be installed on the Power Transformer

Description	Reference
Three (3) bushing sensors for residual flux calculation of power transformer - note 8	STP030400

Select your option

Note 8 : You must fill out the Bushing Sensor Configuration in section 6 to determine the exact type of bushing sensors.

5 - Transformers Re-energization Advisory System (TRAS)

Transformers Re-energization Advisory System allows re-energization of up to three power transformers, please contact VIZIMAX's technical expert for project feasibility

Description	Reference	Select your option
Transformers Re-energization Advisory System available for the re-energization of two or three power transformers in parallel operated by one circuit breaker - Note 9	BDL000004	

Note 9: Project feasibility must be confirmed by VIZIMAX's technical experts

6 - Bushing Sensor Configuration

This section must be filled ONLY if you selected HV bushing sensors in section 4.4

*The following information 6.1 to 6.3 is MANDATORY

6.1 Bushing sensors - Technical Data - Electric environment*

V nominal : Rated transformer voltage on bushing side (normally High side)		kV
Maximum phase to ground expected transient voltage (limited by surge arrester), typical value is 2 P.U.		PU

6.2 Transformer HV Bushing manufacturer (including the location of the manufacturing facility)*

6.3 Transformer HV Bushing part number*

Please provide the following information

6.4 - C1: Bushing main capacitance to test tap - note 9

Note 9 - Please provide the following information. If not available, section 6.6 transformer HV Bushing serial number becomes mandatory

Phase A	
Phase B	
Phase C	

6.5 - C2 : Bushing test tap capacitance to ground - Note 10

Note 10 - Please provide the following information. If not available, section 6.6 transformer HV Bushing serial number becomes mandatory

Phase A	
Phase B	
Phase C	

6.6 Transformer HV Bushing serial number

Phase A	
Phase B	
Phase C	

6.7 Technical Contact of the HV Transformer Bushing (name, Email, phone number...)

6.8 Test Tap

Male or female tap		M/F
Width of tap (thread level) - inch or mm (specify)		

Note: VIZIMAX will do its best sending a model of bushing sensors that fits (mechanically) the taps. Customer is required to verify upon their receipt that the sensors actually fit, to not delay the commissioning of the system in the unlikely case they do not and a model change is required.

For VIZIMAX Use Only
